

 


LifeXWise

Aromatherapy Sleep Machine

63-1521

Thanks for purchasing the LifeWise Aromatherapy Sleep Machine. With six soothing sounds, (BROOK, OCEAN, RAIN, FOREST, WIND and TRAIN) and an aroma fan, your machine helps you relax and fall asleep. The pillow speaker even lets you listen without disturbing others.

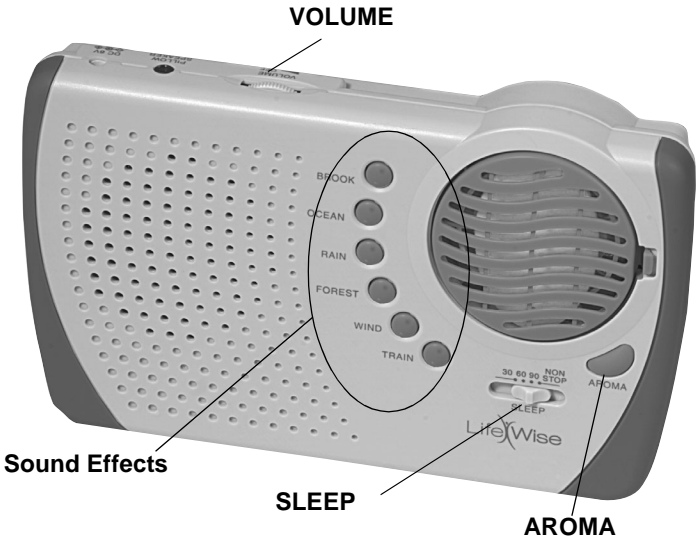


Step One

Connecting Power

You can power your sleep machine with an AC adapter (supplied) or three AA batteries (not supplied).

Using AC Power

 Insert the barrel plug of the supplied AC adapter into the machine's DC 6V jack. This disconnects the internal batteries. Then plug the adapter's AC plug into a standard AC outlet.

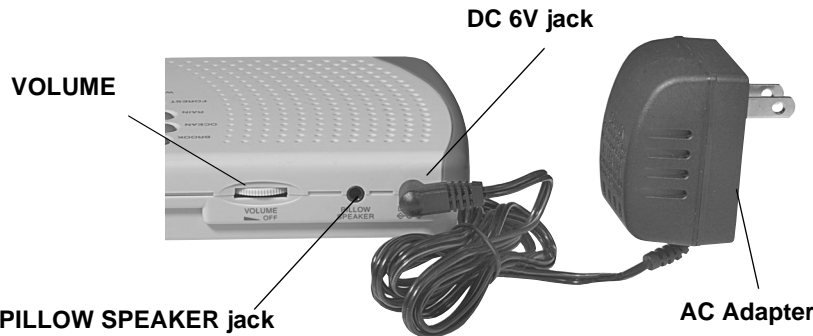


CAUTION

You must use a Class 2 power source that supplies 6V DC and delivers at least 250 mA. Its center tip must be set to positive and its plug must fit the machines DC 6V jack. The supplied adapter meets these specification. Using an adapter that does not meet these specifications could damage the machine and the adapter.

Using Batteries

 1. Remove the battery compartment cover on the back of the sleep machine.
2. Insert the batteries in the compartment as indicated by the polarity symbols (+ and -). To easily remove the batteries, position the fabric strip beneath the batteries.
3. Replace the cover.

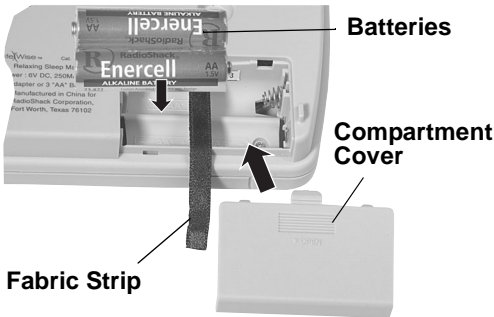

BATTERY NOTES

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the Sleep Machine with batteries for several weeks, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

What's Included

This Sleep Machine • AC Adapter • Pads • Pillow Speaker

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

63-1521
Printed in China
07A03

Step Two

Using the Sleep Sounds

- To turn on the sleep sounds, rotate **VOLUME** clockwise until it clicks.
- To set the timer, slide **SLEEP** to **30**, **60**, **90**, or **NON STOP**.
- To select one of the relaxing sound effects, press either **BROOK**, **OCEAN**, **RAIN**, **FOREST**, **WIND**, or **TRAIN**. The selected sound effect begins and the timer starts.
- To change the sound and restart the time, press another sound effect button.
- Rotate **VOLUME** to adjust the sound to a comfortable listening level.

The sleep sound plays for the selected time, and then turns off. To turn off the machine sooner, set **VOLUME** to **OFF**.

If the machine does not play a sound, rotate **VOLUME** to **OFF**, and then turn it back on again. Press the desired sound effect button.

Step Three

Using the Pillow Speaker

- To listen privately, insert the supplied pillow speaker's plug into the **PILLOW SPEAKER** jack. Connecting the pillow speaker automatically disconnects the built-in speaker.
- Place the pillow speaker near or beneath your pillow.



CAUTION

 
To protect your hearing and prevent damage to the speaker, always turn **VOLUME** to the lowest level before selecting a sound effect, and then adjust **VOLUME** to a comfortable level.

Step Four

Using the Aroma Fan

1. Turn off the machine.
2. Remove the fan cover and insert one of the supplied pads, aligning its holes onto the two bosses.
3. Place a few drops of your favorite aroma oil (or perfume) onto the pad. If the scent fades, add a few drops more.
4. Replace the cover.
5. Turn the machine on.
6. Set **SLEEP** to **30**, **60**, **90**, or **NON STOP**.
7. Press **AROMA** to start the fan.

To set the sound effect and aroma timer separately, set the timer and press the desired sound effect. Then reset the timer, and press **AROMA**. For example set **SLEEP** to **60** and press **BROOK**. Then set **SLEEP** to **30** and press **AROMA**. The aroma fan will run for 30 minutes, while the sound effect will play for 60 minutes.

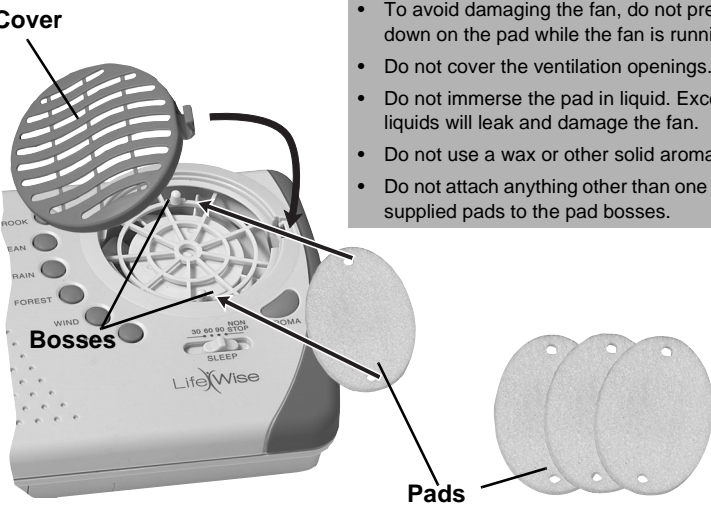

CAUTIONS

- To avoid damaging the fan, do not press down on the pad while the fan is running.
- Do not cover the ventilation openings.
- Do not immerse the pad in liquid. Excess liquids will leak and damage the fan.
- Do not use a wax or other solid aromatics.
- Do not attach anything other than one of the supplied pads to the pad bosses.

NOTE

Pressing any sound effect or the **AROMA** button restarts that function for the time set.

Care

Keep the sleep machine dry; if it gets wet, wipe it dry immediately. Use and store the machine only in room temperature environments. Handle the machine carefully; do not drop it. Keep the machine away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new

Limited 90 Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102